


**INSTRUCTION MANUAL FOR M-200-DC (10-30 VDC)**  
**Mounting Specifications for Actuator and Base**

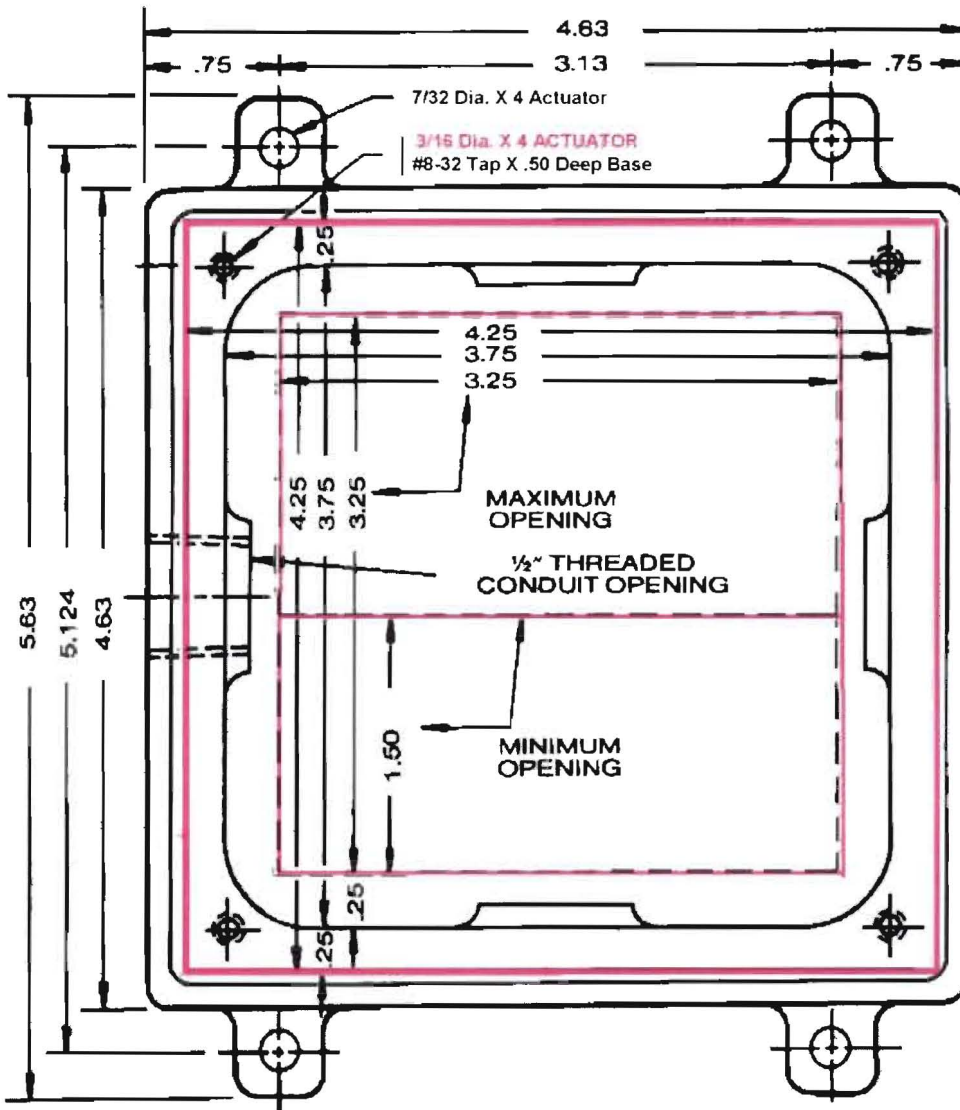


Black Lines Indicate Dimensions for Mounting the M2-BASE.

Red Lines Indicate Dimensions for Mounting the M-200 Actuator to Customer Supplied Enclosure.

Location of Minimum Cut Out Can Be Rotated in 90° Increments to Satisfy Your Mounting Requirements.

Do Not Over Tighten Screws When Attaching Actuator To Base.

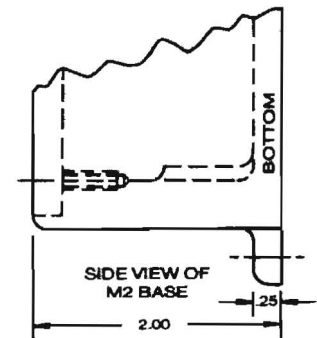

**CAUTION:** READ INSTRUCTION MANUAL BEFORE INSTALLING. CUSTOMER IS SOLELY RESPONSIBLE FOR INSTALLATION. BREAK-A-BEAM SHOULD ONLY BE USED WHERE POINT OF OPERATION GUARDING DEVICES HAVE BEEN PROPERLY INSTALLED AND MAINTAINED SO THAT ALL APPROPRIATE OSHA AND B 11.1 REGULATIONS AND STANDARDS ARE MET. MISAPPLICATION OF THESE PRODUCTS ON MACHINERY LACKING EFFECTIVE POINT OF OPERATION SAFEGUARDS CAN CAUSE SERIOUS INJURY TO THE OPERATOR.